

USER MANUAL

New Feature!
Never Lose Code!
2015 new LCD LED CODES

This remote is preprogrammed to operate the following brands with no setup:

Most: LG, Panasonic, Phillips, RCA, Vizio and Zenith.
If you have one of these brands of TVs, just put batteries in and you are done.
If not, please follow the programming instructions below.

Please note that if you reprogram this remote it will only operate the one brand you reprogrammed it for.

Reprogramming your Remote

1. Manually turn on the TV.
2. Press and hold the **SETUP** key until the LED blinks and remains on, then release the button.
3. Find your 3-digit code from the code table and enter it. After the code is entered the indicator light will turn off and you are done.

NOTE: If the LED blinked rapidly when you entered the code you may have entered an invalid code; recheck the code list and try again. Also if volume and channel functions do not work then you do not have an exact code match and please try another code.

4. Enter your code here for reference

To return to Factory Setting (Pre-programmed for a specific brand)

1. Press **SETUP** and hold until LED stays on.
2. Press **CC**

Reprogramming your Remote using code search.

If the code for your TV is not listed or you cannot get the TV to respond try the following:

1. Turn on the TV.
2. Press and hold the **SETUP** key until the LED blinks and remains on, then release the button.
3. Press the channel **[CH+]** up button slowly over and over again (60 or more times) until the **channel changes**. The LED will blink and then stay lit. If you bypass the code just press **CH-** key to go backward through the library until the TV changes channels. Pressing **CH+** changes direction to forward again.
4. Now press **ENTER** to lock in the code.

Code identification

1. Turn on the TV.
2. Press and hold the **SETUP** key until the LED blinks and remains on.
3. Press the **SETUP** key again and release.
4. Now press each number key slowly from 0 to 9 and when the light blinks that is the first digit of your code. To find the next digit repeat step 4 again and when the light blinks you have found the second digit. Repeat one more time to get the third digit.

Sleep mode


This remote has an internal timer so even if your TV does not have sleep feature, it will work.

1. Turn on the TV.
2. Press **Sleep**, if **Sleep Timer** message appears on TV screen then select amount of time by repeatedly pressing **Sleep** key. You are done.

NOTE: If after pressing **Sleep** no display is observed on TV follow steps 3-6.

3. Press and hold the **sleep** key until the light blinks and stays on. Then release the key.
4. Choose the time between 01 and 99 minutes (two-digit number). The LED will blink and remain off. The timer is now set.
5. The remote must be left pointing toward the TV so it can send the signal to shut the TV when the time elapses. (Obviously, the signal cannot be blocked by anything or it will not work.)
6. To deactivate sleep mode either press the power key or press and hold the sleep key

Button Functions

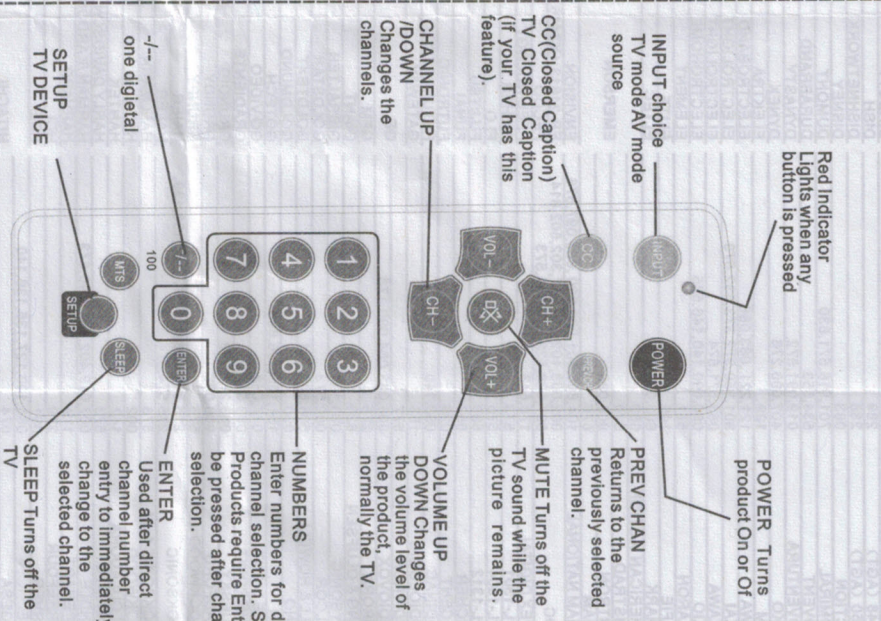

Manual and quick search

1. Turn on TV. Press and hold the key **[MUTE]** first then long press **[CH+]** about 5 seconds, LED will be lit. Release the keys.
2. Press the key **[CH+]** OR **[CH-]**, each time you press it will search once. When the channel changes, please press **[MUTE]** to save the code.
3. If long press the key **[CH+]** / **[CH-]**, it will search the channel changes, please release the key. When the channel changes, please release the key. Press **[CH-]** / **[CH+]** to adjust the code. If the channel changed again, please press **[MUTE]** to save the code.

NOTE: During setting process, if no key is pressed in 10 seconds the setting will be exited automatically.