

Call us! 800-991-6501 (p)

803-999-3786 (d)

803-665-0508 (c)

877-560-9771

Learn more at www.aghsupply.com

dannypatel@aghsupply.com




Instructions for the BBHD-8

We appreciate your business. Please watch the video at least twice. Call us with any questions.



Cover sprinkler heads. Bed Bug Heat Doctor/ Prevsol is not liable for any damage if sprinkler heads are not covered. We recommend using an outside faucet cover available at a local home improvement store. It keeps your sprinkler head 30 degrees cooler than the room temperature.

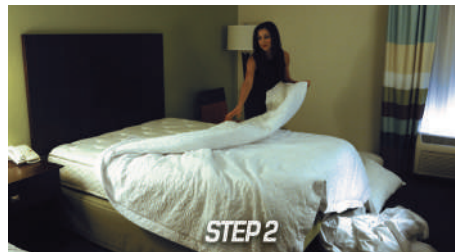

Strip all bed linens including pillows, sheets, comforters, and bed skirts. Make sure you also remove any mattress encasements and covers from the mattress and box spring. Remove bedding from room in bag; wash and dry according to manufacturer's directions. Keep bedding out during treatment.



Put mattress and box springs in an "A-frame" on top of the bed frame. Leave headboards in place. It is not necessary to remove headboards. Unplug all electronics and light fixtures (okay to leave them in the room). Move night stand from between two beds and put over near bathroom area for good airflow.



Plug the 220-cord into the PTAC unit in the room you are treating and twist lock it into place. **Make sure twist lock is turned 1/4 turn to lock in place. If plug is not twist-locked, the warranty will be void.** Take one 110-volt cord and plug into the bathroom GFCI or if no GFCI is available, use the bathroom outlet. The second 110-volt cord will go into a different breaker in the room you are treating if two breakers are available or in the next room if each room only has one breaker.



Place the BBHD-8 unit in the center of the room with the airflow blowing toward the headboard wall.



Cover all room vents, open all of the drawers, and close the bathroom door.



If you need to go to the next room, the one 110-volt cord will slide underneath the door and go to the room next door. Seal the room from the outside with blue painters tape to give you an airtight seal. Persons should leave the room during treatment time.



You are now ready to turn the power switch and fan switch on. Run equipment 3-6 hours or until temperature reaches 135-140 degrees and hold this temperature for 4 more hours for a total of 10 hours or more. After this process, turn the heater coils off and let fan run for 15 minutes then turn fan off and break down equipment. **DO NOT CHANGE THERMOSTAT OR YOUR WARRANTY WILL BE VOID.**

- It is not necessary to use all outlets on the unit. However, if you do not use all outlets on the unit, you will not reach full power. The Master outlet (first outlet closest to the thermostat) on the unit must have power as it powers the fan.
- In packages where fans are included, they are to be placed in areas for optimum air circulation.
- Bed Bug Heat Doctor/Prevsol is not liable for any equipment that has been tampered or altered by anyone other than the manufacturer.

Call us! 800-991-6501 (p)

803-999-3786 (d)

803-665-0508 (c)

877-560-9771

Learn more at www.agsupply.com

dannypatel@agsupply.com




Instructions for the BBHD-12


We appreciate your business. Please watch the video at least twice. Call us with any questions.




Cover sprinkler heads. Bed Bug Heat Doctor/Prevsol is not liable for any damage if sprinkler heads are not covered. We recommend using an outside faucet cover available at a local home improvement store. It keeps your sprinkler head 30 degrees cooler than the room temperature.

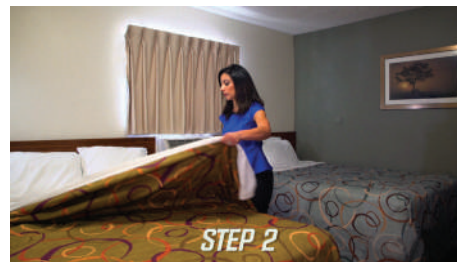

Strip all bed linens including pillows, sheets, comforters, and bed skirts. Make sure you also remove any mattress encasements and covers from the mattress and box spring. Remove bedding from room in bag; wash and dry according to manufacturer's directions. Keep bedding out during treatment.

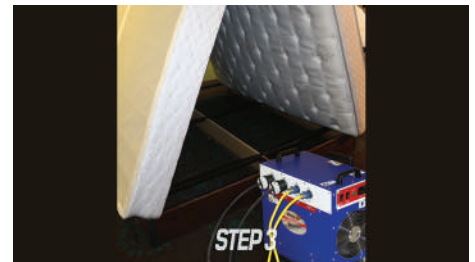

Put mattress and box springs in an "A-frame" on top of the bed frame. Leave headboards in place. It is not necessary to remove headboards. Unplug all electronics and light fixtures (okay to leave them in the room).

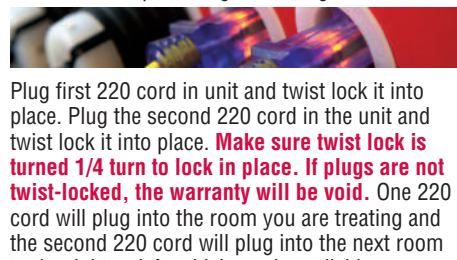

Plug first 220 cord in unit and twist lock it into place. Plug the second 220 cord in the unit and twist lock it into place. **Make sure twist lock is turned 1/4 turn to lock in place. If plugs are not twist-locked, the warranty will be void.** One 220 cord will plug into the room you are treating and the second 220 cord will plug into the next room to the right or left, whichever is available.



Place the BBHD-12 unit in the center of the room with the airflow blowing toward the headboard wall.

Take the yellow 120-volt 20-amp cord and plug into the bathroom GFCI or if no GFCI is available, use the bathroom outlet. The second 120-volt 20-amp cord will go into a separate 20-amp breaker in the room you are treating. If only one is available in that room, simply go to the room next door where you plugged in your PTAC cord.



Cover all room vents, open all of the drawers, and close the bathroom door.



The black 220-cord and the yellow 120-cord will slide underneath the door and go to the room next door. Seal the room with blue painters tape to give you an airtight seal. Persons should leave the room during treatment time.



You are now ready to turn the power switch and fan switch on. Run equipment until temperature reaches 135-140 degrees and hold this temperature for 3 more hours. After this process, turn the heater coils off and let fan run for 15 minutes then turn fan off and break down equipment. **DO NOT CHANGE THERMOSTAT OR YOUR WARRANTY WILL BE VOID.**

- It is not necessary to use all outlets on the unit. However, if you do not use all outlets on the unit, you will not reach full power. The Master outlet (first outlet closest to the thermostat) on the unit must have power as it powers the fan.
- In packages where fans are included, they are to be placed in areas for optimum air circulation.
- Bed Bug Heat Doctor/Prevsol is not liable for any equipment that has been tampered or altered by anyone other than the manufacturer.

Call us! 800-991-6501 (p)

803-999-3786 (d)

803-665-0508 (c)

877-560-9771

Learn more at www.agsupply.com

dannypatel@agsupply.com




Instructions for the BBHD-12 (265-277V)


We appreciate your business. Please watch the video at least twice. Call us with any questions.



Cover sprinkler heads. Bed Bug Heat Doctor/Prevsol is not liable for any damage if sprinkler heads are not covered. We recommend using an outside faucet cover available at a local home improvement store. It keeps your sprinkler head 30 degrees cooler than the room temperature.

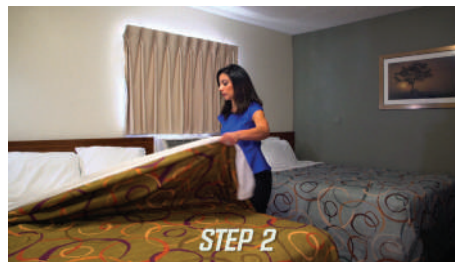


Strip all bed linens including pillows, sheets, comforters, and bed skirts. Make sure you also remove any mattress encasements and covers from the mattress and box spring. Remove bedding from room in bag; wash and dry according to manufacturer's directions. Keep bedding out during treatment.

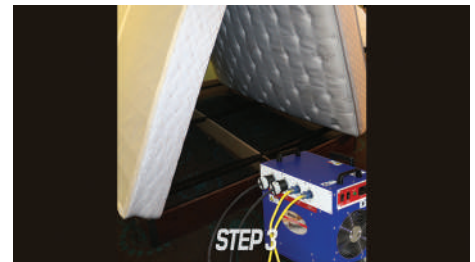

Put mattress and box springs in an "A-frame" on top of the bed frame. Leave headboards in place. It is not necessary to remove headboards. Unplug all electronics and light fixtures (okay to leave them in the room).



Take the yellow 120-volt 20-amp cord and plug into the bathroom GFCI or if no GFCI is available, use the bathroom outlet. The second 120-volt 20-amp cord will go into a separate 20-amp breaker in the room you are treating. If only one is available in that room, simply go to the room next door where you plugged in your PTAC cord.

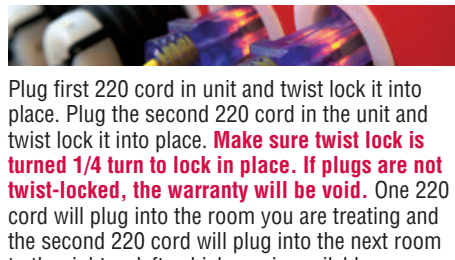

Plug first 220 cord in unit and twist lock it into place. Plug the second 220 cord in the unit and twist lock it into place. **Make sure twist lock is turned 1/4 turn to lock in place. If plugs are not twist-locked, the warranty will be void.** One 220 cord will plug into the room you are treating and the second 220 cord will plug into the next room to the right or left, whichever is available.



Place the BBHD-12 unit in the center of the room with the airflow blowing toward the headboard wall.



Cover all room vents, open all of the drawers, and close the bathroom door.



The black 220-cord and the yellow 120-cord will slide underneath the door and go to the room next door. Seal the room with blue painters tape to give you an airtight seal. Persons should leave the room during treatment time.



You are now ready to turn the power switch and fan switch on. Run equipment until temperature reaches 135-140 degrees and hold this temperature for 3 more hours. After this process, turn the heater coils off and let fan run for 15 minutes then turn fan off and break down equipment. **DO NOT CHANGE THERMOSTAT OR YOUR WARRANTY WILL BE VOID.**

- It is not necessary to use all outlets on the unit. However, if you do not use all outlets on the unit, you will not reach full power. The Master outlet (first outlet closest to the thermostat) on the unit must have power as it powers the fan.
- In packages where fans are included, they are to be placed in areas for optimum air circulation.
- Bed Bug Heat Doctor/Prevsol is not liable for any equipment that has been tampered or altered by anyone other than the manufacturer.

Call us! 800-991-6501 (p)

803-999-3786 (d)

803-665-0508 (c)

877-560-9771

Learn more at www.agsupply.com

dannypatel@agsupply.com



Instructions for the BK-10

We appreciate your business. Please watch the video at least twice. Call us with any questions.



Cover sprinkler heads. We recommend using an outside faucet cover available at a local home improvement store. It keeps your sprinkler head 30 degrees cooler than the room temperature.



Strip all bed linens including pillows, sheets, comforters, and bed skirts. Make sure you also remove any mattress encasements and covers from the mattress and box spring. Remove bedding from room in bag; wash and dry according to manufacturer's directions. Keep bedding out during treatment.



Put mattress and box springs in an "A-frame" on top of the bed frame. Leave headboards in place. It is not necessary to remove headboards. Unplug all electronics and light fixtures (okay to leave them in the room).



Plug one cord into the machine and the other end into a 20-amp breaker. Repeat this with the other five cords using a dedicated 20-amp breaker for each plug (not outlets but use breakers). During the heat process, it is imperative that you are not stacking clothes, stuffed animals, or blankets in a pile. This process should be bagging up as much of this as possible, taking to an outside laundromat.



Place the BK-10 unit in the center of the room with the airflow blowing toward the headboard wall.



Cover all room vents, open all of the drawers, and close the bathroom door.



You are now ready to turn the power switch and fan switch on. Run equipment until temperature reaches 135-140 degrees and hold this temperature for 3 more hours. **DO NOT CHANGE THERMOSTAT OR YOUR WARRANTY WILL BE VOID.** Persons should leave the room during treatment time.

- It is not necessary to use all outlets on the unit. However, if you do not use all outlets on the unit, you will not reach full power. The Master outlet (first outlet closest to the thermostat) on the unit must have power as it powers the fan.
- In packages where fans are included, they are to be placed in areas for optimum air circulation.
- Bed Bug Heat Doctor/PrevSol is not liable for any equipment that has been tampered or altered by anyone other than the manufacturer.

Call us! 800-991-6501 (p)

803-999-3786 (d)

803-665-0508 (c)

877-560-9771

Learn more at www.aghsupply.com

dannypatel@aghsupply.com




Instructions for the BK-15

We appreciate your business. Please watch the video at least twice. Call us with any questions.



Cover sprinkler heads. We recommend using an outside faucet cover available at a local home improvement store. It keeps your sprinkler head 30 degrees cooler than the room temperature.

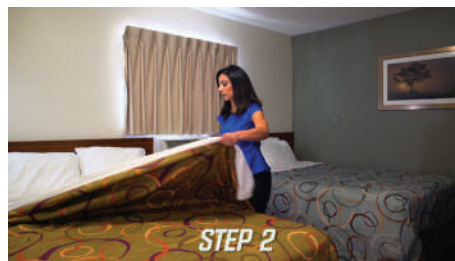

Strip all bed linens including pillows, sheets, comforters, and bed skirts. Make sure you also remove any mattress encasements and covers from the mattress and box spring. Remove bedding from room in bag; wash and dry according to manufacturer's directions. Keep bedding out during treatment.



Put mattress and box springs in an "A-frame" on top of the bed frame. Leave headboards in place. It is not necessary to remove headboards. Unplug all electronics and light fixtures (okay to leave them in the room).



Plug one of the 220-cords into the PTAC unit in the room you are treating. The second 220-cord will plug into the room next to you either to the right or the left, whichever is available. Take the first yellow cord and plug into the master outlet on the unit. Plug this into a 110 outlet on a single 20-amp breaker. Repeat this with the next three yellow cords plugging them into the machine and plugging them into 110 outlets on separate 20-amp breakers for each cord. You will be using four separate 20-amp breakers for this step.



Place the BK-15 unit in the center of the room with the airflow blowing toward the headboard wall.



Cover all room vents, open all of the drawers, and close the bathroom door.

- It is not necessary to use all outlets on the unit. However, if you do not use all outlets on the unit, you will not reach full power. The Master outlet (first outlet closest to the thermostat) on the unit must have power as it powers the fan.
- In packages where fans are included, they are to be placed in areas for optimum air circulation.
- Bed Bug Heat Doctor/Prevsol is not liable for any equipment that has been tampered or altered by anyone other than the manufacturer.



The black 220-cord and the yellow 120-cord will slide underneath the door and go to the room next door. Seal the room by placing a towel or blanket at the door. Persons should leave the room during treatment time.



You are now ready to turn the power switch and fan switch on. Run equipment until temperature reaches 135-140 degrees and hold this temperature for 3 more hours. **DO NOT CHANGE THERMOSTAT OR YOUR WARRANTY WILL BE VOID.**